

Chassis

Steering/Group 46

REF. NO.	PART NUMBER	DESCRIPTION	QTY.									
				L1013	L1113	L1116	L1117	L1316	L1317	L1418	LS1418	
1	344 460 70 57	Universal Joint/Steering	2	■	■	■	■	■	■	■	■	■
2	360 462 05 96	Boot/Universal Joint, Top	1	■	■	■	■	■	■	■	■	■
3	000 464 11 01	Steering Wheel	1	■	■	■	■	■	■	■	■	■
4	000 464 26 31	Cap/For Steering Wheel 345 460 70 03	1	■	■	■	■	■	■	■	■	■
5	376 460 70 50	Bushing/Steering Column (Up to Chassis 582696)	1	■	■	■		■		■	■	
6	352 462 02 51	Plastic Cam Bushing/Steering Column	1	■	■	■	■	■	■	■	■	■
7	381 462 00 75	Washer/Steering Column (Up to Chassis 582696)	1	■	■	■		■		■	■	
8	344 460 74 31	Steering Column Bracket (Up to Chassis 582696)	1	■	■	■		■		■	■	
9	376 462 00 75	Washer/Steering Column (From Chassis 582697)	1	■	■	■	■	■	■	■	■	■
10	345 462 70 23	Cover/Steering Column (From Chassis 582697)	1	■	■	■	■	■	■	■	■	■
11	345 462 70 50	Bushing/Steering Column (From Chassis 582697)	1	■	■	■	■	■	■	■	■	■
12	345 462 70 65	Ring/Steering Column (From Chassis 582697)	2	■	■	■	■	■	■	■	■	■
13	345 462 70 28	Ring Bearing/Steering Column (From Chassis 582697)	1	■	■	■	■	■	■	■	■	■
14	345 460 74 31	Steering Column Bracket (From Chassis 582697)	1	■	■	■	■	■	■	■	■	■
15	344 460 79 05	Drag Link/Steering	1	■	■	■						
15	345 460 86 05	Drag Link/Steering, Fits 376 Chassis 161-164, 171-174	1		■		■					
15	352 460 33 05	Drag Link/Steering	1					■		■	■	
15	345 460 81 05	Drag Link/Steering, Fits 376.175 Chassis Only For Model L1117	1				■		■			
16	344 330 71 35	Joint/For Drag Link 344 460 79 05	1	■	■	■						
16	000 463 34 29	Joint/For Drag Link 345 460 86 05 and 345 460 81 05	1				■		■			
16	000 330 31 35	Joint/For Drag Link 352 460 33 05	1					■		■	■	
17	345 460 81 01	Steering Box, Fits Brazil Up to Chassis 549890 Fits Hampton Up to Chassis 546041	1	■	■	■		■		■	■	■
17	360 460 21 01 88	Exchange Steering Box, Fits Same as 345 460 81 01	1	■	■	■		■		■	■	■
17	360 460 31 01	Steering Box, Fits 765.404 Model Type LS5C	1	■	■	■	■	■	■	■	■	■
17	360 460 31 01 88	Steering Box, Fits 765.404 Model Type LS5C	1	■	■	■	■	■	■	■	■	■
18	321 462 00 60	Seal Ring, Through Cab Floor	1	■	■	■	■	■	■	■	■	■

REF. NO.	PART NUMBER	DESCRIPTION	QTY.								
				L1013	L1113	L1116	L1117	L1316	L1317	L1418	LS1418
19	335 462 00 96	Boot, Through Cab Floor	1	■	■	■	■	■	■	■	■


Fuel System/Group 47

376 470 00 05 4 1/2" Brass threaded Cap for LS1418 376-046 (Under # MFE 923)

110 470 02 80 - Gasket for Cap shown

303 470 00 31 - Chain " " "

000 471 12 30 - Locking fuel Cap.

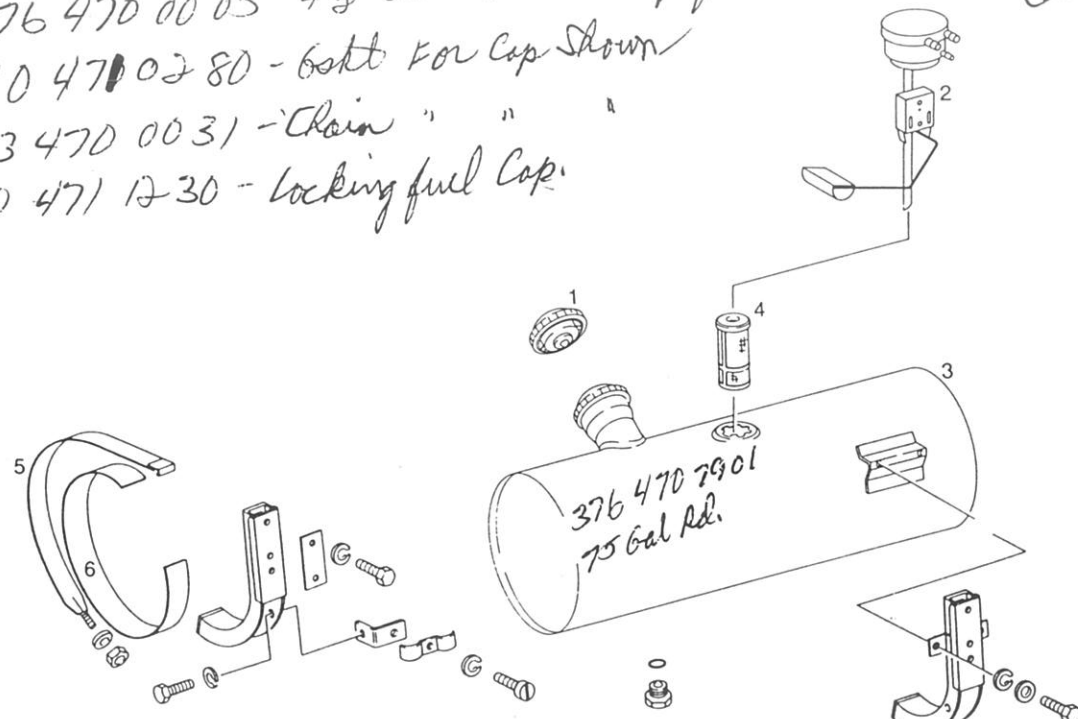

Locking Fuel Caps

~~976~~ 976 470 00 05 - (MFE 305) 60 Gal Tank

976 470 01 05 - (MFE 520) 100 Gal Tank

976 470 02 05 (MFE 631A) Gasket for above Caps

REF. NO.	PART NUMBER	DESCRIPTION	QTY.								
				L1013	L1113	L1116	L1117	L1316	L1317	L1418	LS1418
1	309 470 00 05	Cap/Fuel Tank <i>Top Type 304 997 03 40 Seal Ring</i>	1	■	■	■	■	■	■	■	
1	000 471 12 30	Cap/Fuel Tank/Locking	1	■	■	■	■	■	■	■	